


RACKMOUNT TRAY - Assembly Details

AMPETRONIC

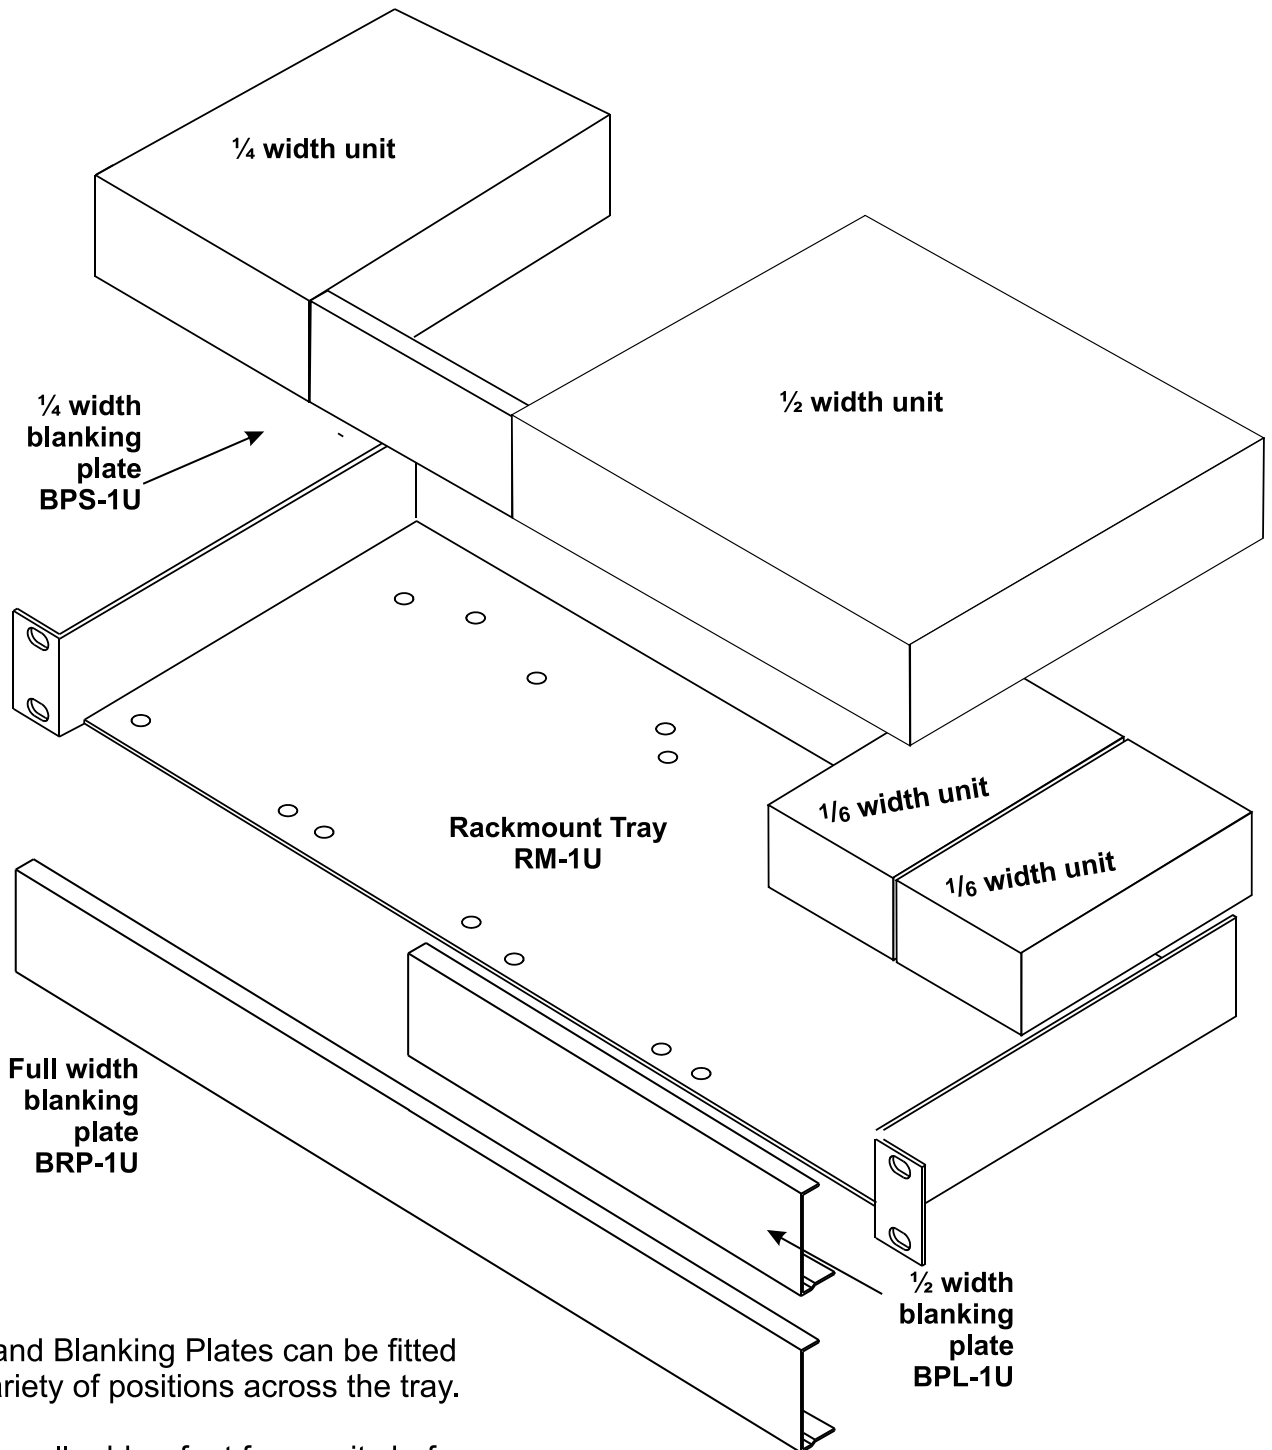

1. Units and Blanking Plates can be fitted in a variety of positions across the tray.
2. Remove all rubber feet from units before fitting. DO NOT re-use the feet fixing screws.
3. Units and Blanking Plates are secured to the rackmount tray using M3 x 6.0 countersunk screws supplied with the tray. (8 off supplied)
DO NOT USE ANY OTHER SCREW LENGTH AS EQUIPMENT MAY MALFUNCTION.
4. $\frac{1}{6}$ width units comprise of an SP5 - 1 screw per unit
 $\frac{1}{4}$ width units are MP221, CTU11 3 screws per unit
 $\frac{1}{2}$ width units are ILD122 & 300 - 4 screws per unit, CLS2 - 2 screws per unit